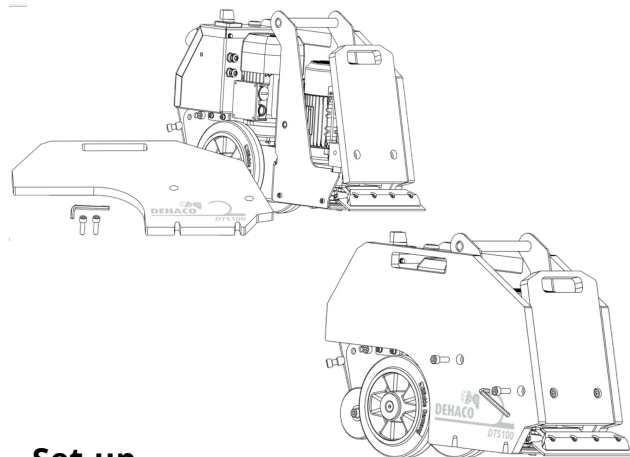
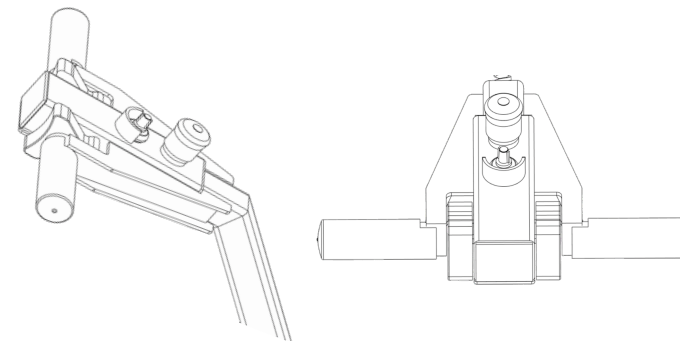


DTS**Set-up**

- Unpack and check all parts
- Position and fasten the ballast weights
- Insert and fasten the handle
- Connect the power and control cables

1

**Controls**

- Push the thumb buttons forward for forward drive
- Push the thumb buttons backwards for reverse drive
- Adjust the drive speed with the speed control switch
- Stop the machine with the emergency stop
- Start and stop the stripping mechanism using the switch on the main control box.

2

Blade installation

- Loosen the bolts
- Lift the blade fastener
- Insert the blade, aligning the slots
- Fasten each bolt
- V-blade – cuts and lifts the surface in strips, suitable for vinyl and carpet
- U-blade – cuts the surface into strips, suitable for vinyl
- Flat blade – universal blade, suitable for all surfaces
- Flat blade with bend – blade for tough situations, only suitable for hard underfloor surfaces



3

Maintenance

- Remove any debris from within the stripping mechanism
- Remove any debris from in between the ballast weights
- Hand clean with a damp cloth, do not use a water hose or steam cleaner
- Replace the wheels as required to ensure good traction

4

Safety first

- Always wear your PPE
- Check the area for hazards before working
- Inspect and replace any damaged parts
- Do not touch any moving parts
- Remove the blade during transport

Quick tips

- Work efficiently, create long strips
- Reduce tyre wear by preventing wheelspin
- Use the correct type of blade
- Use the free wheels for quick manoeuvring
- Regularly remove any debris from the stripping mechanism and around the motors
- In case of drive motor failure, remove extension cable and use a different power source

Always remove the blade prior to transport