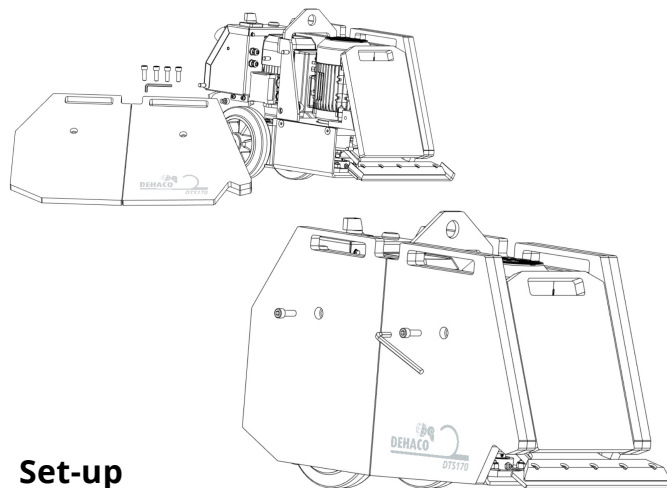
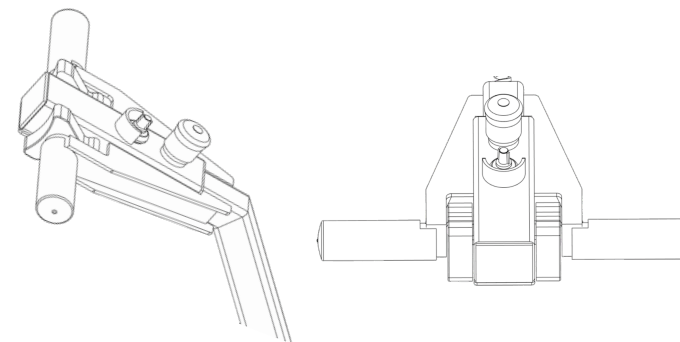


**DTS****Set-up**

- Unpack and check all parts
- Position and fasten the ballast weights
- Insert and fasten the handle
- Connect the power and control cables

1


**Controls**

- Push the thumb buttons forward for forward drive
- Push the thumb buttons backwards for reverse drive
- Adjust the drive speed with the speed control switch
- Stop the machine with the emergency stop
- Start and stop the stripping mechanism using the switch on the main control box.

2

**Blade installation**

- Loosen the bolts
- Lift the blade fastener
- Insert the blade, aligning the slots
- Fasten each bolt
- V-blade – cuts and lifts the surfaces in strips, suitable for vinyl and carpet
- U-blade – cuts the surface into strips, suitable for vinyl
- Flat blade – universal blade, suitable for all surfaces
- Flat blade with bend – blade for tough situations, only suitable for hard underfloor surfaces

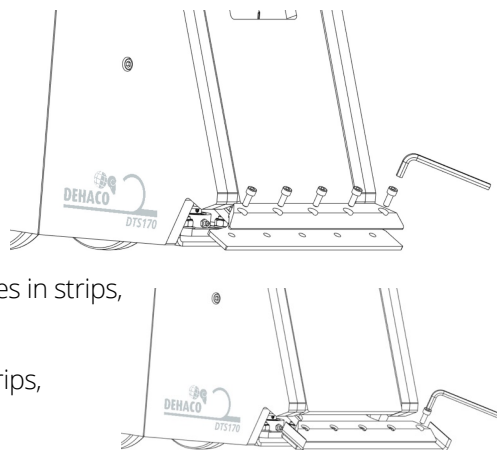

3

**Maintenance**

- Lubricate all 3 bearings in the stripping mechanism
- Remove any debris from within the stripping mechanism
- Remove any debris from in between the ballast weights
- Hand clean with a damp cloth, do not use a water hose or steam cleaner
- Replace the wheels as required to ensure good traction

4

**Safety first**



- Always wear your PPE
- Check the area for hazards before working
- Inspect and replace any damaged parts
- Do not touch any moving parts
- Remove the blade during transport

**Quick tips**

- Work efficiently, create long strips
- Reduce tyre wear by preventing wheelspin
- Use the correct type of blade
- Use the free wheels for quick manoeuvring
- Regularly remove any debris from the stripping mechanism and around the motors
- In case of drive motor failure, remove extension cable and use a different power source

**Always remove the blade prior to transport**

**DTS**

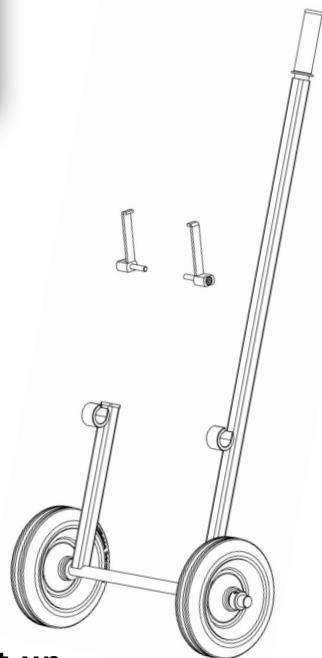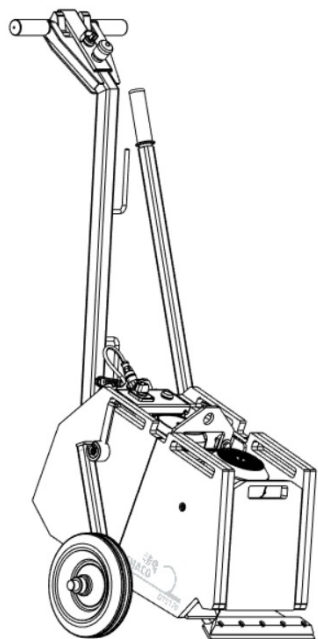

### Set-up

- Unpack and check all parts
- Position and hook from the transporter brackets in the carry handle from the rear ballast
- Fasten the transporter bracket

### Using the transporter

- Position the transporter behind the DTS170 floor stripper
- Rotate the transporter forward and hook it over the brackets mounted onto the ballast
- Pull on the transporter handle and push DTS170 handle forward to lift it onto the transporter wheels
- Rotate the transporter and DTS170 until it is in balance on the wheels. The floor stripper is now ready for transport.

